



SafeFlex2 Smart AI QHD Baby Camera

User Manual

MODELS: PXB-BHM009

The features described in this User Guide are subject to modifications without prior notice.

TABLE OF CONTENTS

1.0	OVERVIEW OF THE PARENT UNIT	5
2.0	SETTING UP YOUR CAMERA UNIT	6
3.0	SETTING UP THE CAMERA UNIT FOR WI-FI INTERNET VIEWING	7
4.0	REGISTRATION (PAIRING)	10
5.0	WALL MOUNTING INSTALLATION OF THE CAMERA	11
6.0	DISPOSAL OF THE DEVICE (ENVIRONMENT)	16
7.0	TECHNICAL SPECIFICATIONS.....	16
8.0	WARRANTY TERMS AND CONDITIONS	17
9.0	INDEMNITY	17
10.0	WARRANTY AND WARRANTY DISCLAIMER	18
11.0	LIMITATIONS OF LIABILITY	19
12.0	NOTES	20

Welcome...

to your new Pixbee SafeFlex2 Smart AI Baby Camera.

The Smart Baby Camera lets you see your baby from your smartphone. Watch over and communicate with your baby from anywhere in the world.

Please keep your original dated sales receipt for your records.

For warranty service of your Pixbee product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For questions, warranty, support or service related to the product, please contact us by:

Email: support@Pixbee.com.au

This User Guide has all the information you need to make the most out of your product. Please read the Safety Instructions on pages 8-9 before you install the unit.

Inside the Box

1 x SafeFlex2 Smart Baby Camera

1 x Wall Mounting & Cover Set

1 x USB Charger & Cable

 
1 x User Manual

WARNING: This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User Guide, safe to use. Therefore, always read the instructions in this User Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- The Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User Guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Do not install the Baby Monitor in extreme cold or heat, direct sunlight, or close to a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical sockets.


CAUTION: The battery replacement must be conducted by Pixbee or other authorised representatives.

1.0 OVERVIEW OF THE PARENT UNIT

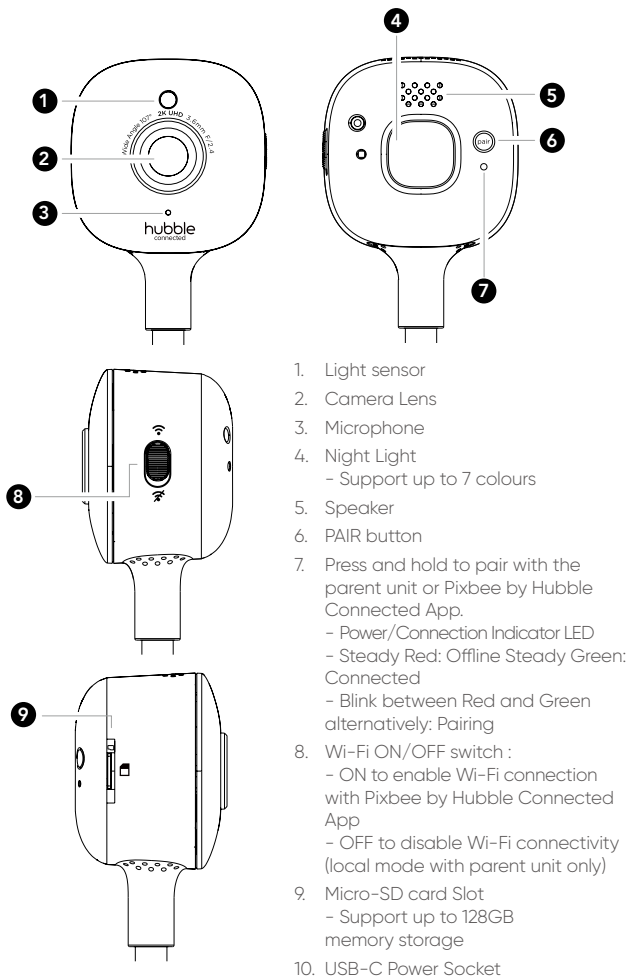

2.0 SETTING UP YOUR CAMERA UNIT

 Connecting the Power Supply for the Camera Unit

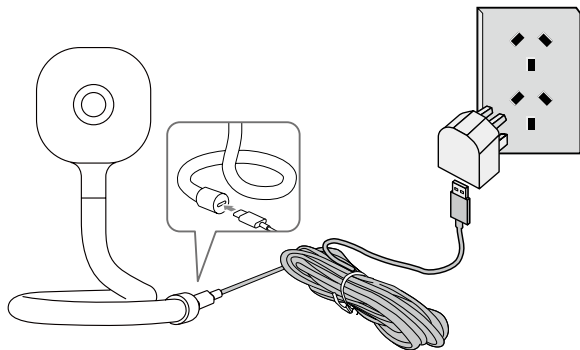

1. Insert the USB-A (bigger end) plug of the USB cable into the USB charger then insert the USB-C (smaller end) into the USB-C socket at the end of the flexible arm of the camera
2. Connect the USB charger to the electrical outlet.
3. The power indicator on the camera lights in green colour.

NOTE Only use the supplied power adapter (DC5V/1500mA)

 
3.0 SETTING UP THE CAMERA UNIT FOR WI-FI INTERNET VIEWING

A. Install Pixbee by Hubble Connected App



1. Scan the QR code with your smart device and download Pixbee by Hubble Connected App from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
2. Install Pixbee by Hubble Connected App on your device.

B. View on Compatible Smartphones and Tablets.

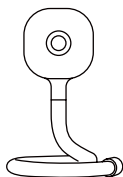

1. Open the Pixbee by Hubble Connected App on your compatible smartphone or tablet.
2. Follow the in-app instructions to create your Pixbee account and connect to your device.

Please take note of the following minimum system requirements:

WARNING This baby monitor allows internet users to hear or view activity. Use the security. Features included with this device to restrict internet viewership. Smartphones/ tablets: ios 14.0, Android™ 8.0

3. Sign Up with Pixbee by Hubble Connected app on Your Smart Device

- Ensure that your smart device is connected to your Wi-Fi® router.
- Run app, tap **Create New Account** (fig.1)
- Enter your access code emailed to you to sign up with Pixbee by Hubble Connected app. Follow in-app instruction to connect & use the device (fig.2)

NOTE: If you already have a Pixbee by Hubble Connected App account, please tap Log in to go to the next steps.

fig. 1


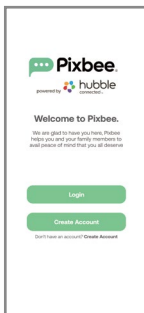 


fig. 2

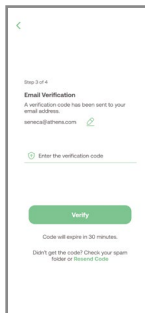 

4. Add the Camera to your account

- Tap SafeFlex2 to add the new camera (fig.3).
- The following setup instructions will appear on the screen, select your Wi-Fi network and enter Password (fig.4).

fig. 3



fig. 4



- Power on your camera and wait for the Red Led flashing on the camera (fig. 5).
- Locate the Pair button on the camera, press and hold the Pair button until you hear "Ready for Pairing" (fig.6).
- Follow the instruction and generate a QR code (fig.7).

fig. 5

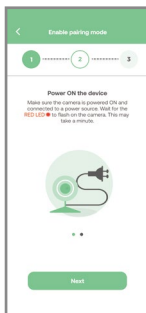 


fig. 6



- Hold **20-30 cm** in front of the camera to get it scanned (fig. 8). It will take a few minutes for the Camera to connect to the Wi-Fi® network. (fig. 8)

NOTE: If connection fails, please tap Retry and repeat the steps starting from Step 1.

fig. 7



fig. 8



Follow the in-app instruction to set up and use your SafeFlex2 smart baby camera.

4.0 REGISTRATION (PAIRING)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the

Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit,

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until is highlighted press to  confirm. The  (add) /  (delete) /  (view) /  (scan) menu will pop up.
3. Press the  LEFT button or  RIGHT button to select (add) and press the  button to confirm.
4. Camera 1/2/3/4 will pop up. Press the  LEFT button or  RIGHT button to select the desired Camera, and press the  button to start searching for a camera unit.

Note: If a camera is currently paired with the Parent Unit, its camera location (**icon in black**) cannot be selected for a new registration.

5. Press and hold the  button on the back of the Baby Unit until the Parent Unit finds the camera, beeps and shows **PAIR OK** on the screen. The camera prompts **SET UP COMPLETED**.

Note: A camera can only be registered to one Parent Unit at any one time.


5.0 WALL MOUNTING INSTALLATION OF THE CAMERA

Go Baby AI Camera features advanced AI prediction algorithms so that unsafe sleep postures like when baby has their face covered face or aren't on their back, are detected and you are alerted via the Pixbee by Hubble Connected App.*


For accurate detection and notification of all events, please mount the camera in a bird's eye view to oversee your baby at about 4 to 5 ft (1.2 to 1.5m) distance for optimal detection like the illustration below. You can also read up more on correct camera installation angles in our

hubbleconnected.co.uk


***Refer to the Pixbee by Hubble Connected App program.**

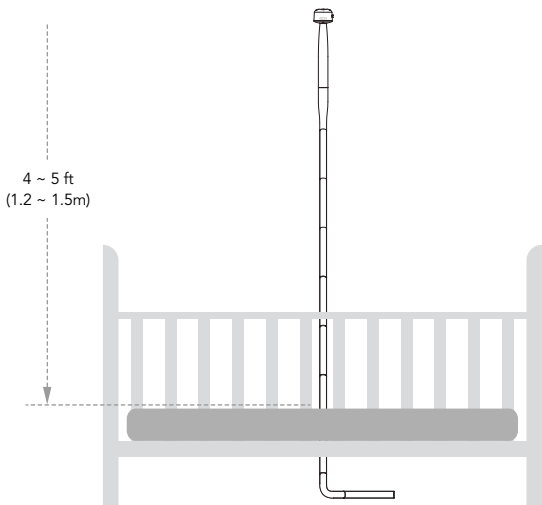 

 
- Position the camera mounting wall plate on the wall according to the expected camera height against the crib mattress.
- Mark on the wall the two mounting screw holes of the camera mounting plate
- Drill 2 holes with the size suitable for fitting a #6 (4mm) screw drywall anchor
- Use the #6 (4mm) self-tapping screws and associated drywall anchors to mount the disc on the wall

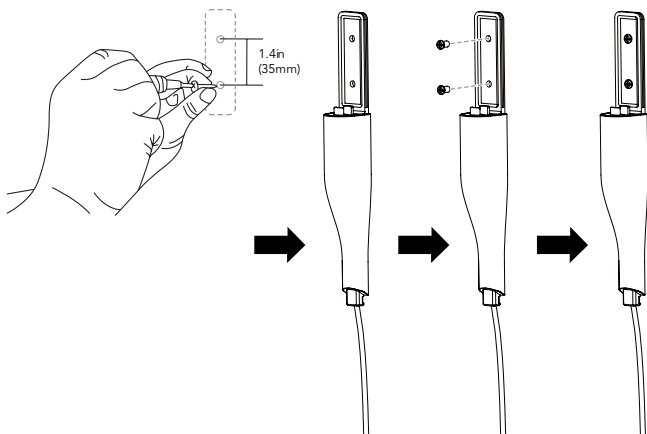

 - Connect the USB-C socket at the end of the camera flexible arm to the USB-C plug inside the round hole of the mounting wall plate.

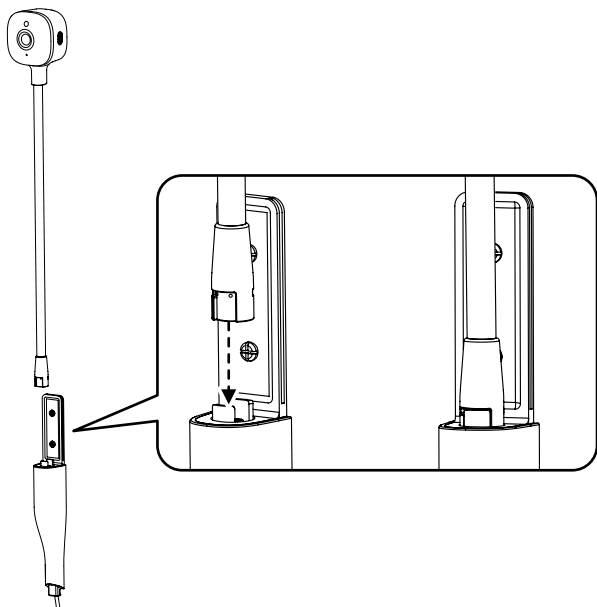


 - Keep the camera flexible arm straight and slide in the camera support sleeve along the rail of the mounting wall plate all the way to the end.

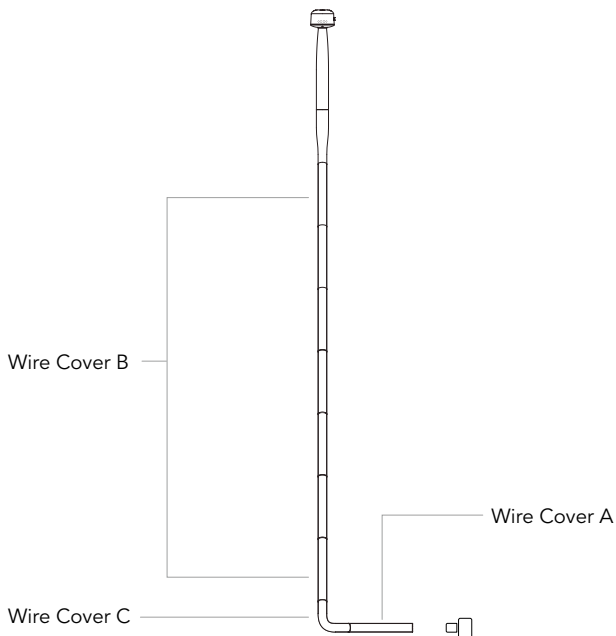

- Align the camera head along the supporting sleeve profile, adjust the camera head for the optimal viewing angle

 - To prevent the power cable from being within reach and being a potential choke hazard for the baby in the crib, it is highly recommended to cover the power cable with the Wall Wire Cover provided – Cover A is for the start and end; Cover B is for the middle sections and Cover **C** is the right-angled cover for turning the orientation from vertical to horizontal.
- Clean the wall with a soft cloth or an alcohol wipe before using the adhesive.
- Remove the clear film from the double adhesive behind each of the wall wire covers as below shown.
- Start with wall wire cover A below the camera to cover the power cable then press the cover to stick to the wall
- Snap fit the wall wire cover **B** immediate after the cover **A**. Then press to stick to the wall
- Repeat snapping the wall wire cover **B**
- Repeat the steps until the cable is entirely covered by the wall wire covers as shown below.
- Connect the end of the extension cable to the USB-C plug of the power adapter.
- Connect the USB charger to the electrical outlet.

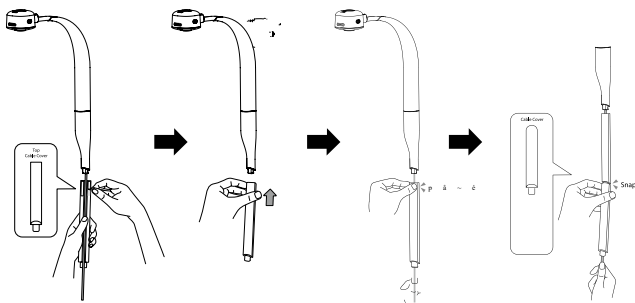

6.0 DISPOSAL OF THE DEVICE (ENVIRONMENT)

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. Local authority has implemented a specific collection and recycling system for which producers are responsible. Help us protect the environment in which we live!



7.0 TECHNICAL SPECIFICATIONS

Camera Unit

Radio Frequency	Proprietary 2400 MHz to 2483.5 MHz ,Wi-Fi® 802.11 a/n/ac/ax HT20 / n/ac/ax HT40, 5GHz, Wi-Fi® 802.11 b/g/n/ax HT20 / n/ax HT40, 2.4GHz
Image Sensor	Colour CMOS 3M pixels
IR LED	8 pcs
Operating Temperature	From 5°C to 40°C
USB Power adapter	Model: KA12C-0501500BS Input 100-240VAC, 50/60Hz; 350mA; Output DC5V, 1.5A, 7.5W WARNING Use only with supplied power supply. The network voltage is classified as hazard by the criteria of this standard.

8.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code
for customer support:**



9.0 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorised modification or alteration of products or software.

10.0 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

11.0 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.



Smart Tech for Growing Explorers.

DIRECTED.

All Images, Information and Content are Copyright ©
2026 Directed Electronics Australia Pty Ltd.
All Rights Reserved.



www.pixbee.com.au | www.pixbee.co.nz

Pixbee, Pixbee Powered by Hubble, Pixbeebaby and the Logos, are trademarks of Pixbee Care Limited. 5GenCare and the Logo are trademarks of 5GenCare Limited. Apple logo is trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. All other trademarks are the property of their respective owners.

© 2025 Pixbee Care Limited. All rights reserved.