



Pixbee Digi Jnr.

Digital Watch with Step Count

USER MANUAL

CONTENTS

1. GETTING STARTED	3
1.1 WHAT'S IN THE BOX	3
1.2 WATCH OVERVIEW	3
1.3 WATCH CONTROLS	4
1.3.1 BUTTON CONTROLS	4
1.4 WATCH MODES	5
1.5 WEAR AND CARE	5
1.6 REPLACING THE BATTERY	6
2. PIXBEE WATCH FEATURES	7
2.1 STEP COUNT FUNCTION	7
2.1.1 TURNING ON/OFF STEP COUNT FUNCTION	7
2.1.2 RESETTING STEP COUNT	7
2.1.3 VIEWING STEP HISTORY	8
2.2 DATE AND TIME SETTINGS	8
2.2.1 SETTING THE TIME AND DATE	8
2.3 ALARM AND HOURLY CHIME	9
2.3.1 TURNING THE ALARM ON/OFF	9
2.3.2 TURNING THE HOURLY CHIME ON/OFF	10
2.3.3 SETTING THE ALARM TIME	10
2.4 STOPWATCH	11
2.4.1 USING THE STOPWATCH	11
2.4.2 TWO-PLAYER SPLIT TIMING	11
3. SPECIFICATIONS	12
4. SAFETY AND HANDLING	12
5. WARRANTY TERMS AND CONDITIONS	14
5.1 INDEMNITY	15
5.2 WARRANTY AND WARRANTY DISCLAIMER	15
5.3 LIMITATIONS OF LIABILITY	17

1. GETTING STARTED

Thank you for your purchase. Please read this user manual carefully before using the watch and retain it for future reference.

1.1 WHAT'S IN THE BOX

1 x Pixbee Digital Watch
1 x User Manual

1.2 WATCH OVERVIEW



Button A: Step (function)

Button B: Switch between different watch modes

Button C: Used for resetting the stopwatch and selecting values in setting modes

Button D: Used for backlight, starting/pausing the stopwatch, and adjusting values in setting modes

1.3 WATCH CONTROLS

The watch supports four button operations, each with multiple functions depending on the current mode.

1.3.1 BUTTON CONTROLS

OPERATION	FUNCTION	NOTE
Long Press Button A (Step)	• Turns on/off the Step function.	Hold for three seconds.
Short Press Button B	• Switches between different watch modes	
Short Press Button C	• Resets the stopwatch.	• Only when the stopwatch is paused or stopped.
Short Press Button C	• Selects the value to be adjusted.	• Used in each setting mode.
Short Press Button C	• Stop the alarm from beeping.	• Only when alarm beeps.
Short Press Button D	• Activates the watch backlight.	• This works in any mode.
Short Press Button D	• Stop the alarm from beeping.	• Only when alarm beeps.
Short Press Button D	• Starts or pauses timing.	• Only in stopwatch mode.

OPERATION	FUNCTION	NOTE
Short Press Button D	• Adjusts the selected value.	• Used in each setting mode.
Long Press Button D	• Quickly adjusts the selected value.	• Values can only be adjusted in increasing order.
Simultaneous Press Button C and D	• Toggle the alarm on or off.	• Only in normal time mode.

1.4 WATCH MODES

NOTE: Grey text indicates that the character is in the selected state.



1.5 WEAR AND CARE

To avoid discomfort, do not overtighten the watch on your wrist. Take it off from time to time.

The watch has a 5ATM waterproof rating. It can be worn in cold-water showers, shallow waters and indoor pools.

NOTE: Do not use the watch in spas, hot springs, deep dives or any high-temperature, high-humidity environment.

CAUTION:

- If you find the watch particularly uncomfortable to wear, please adjust the strap accordingly for a better fit or take it off.
- Clean and dry the watch and its strap after heavy workouts or if the watch has been exposed to sweat or fresh water. Wearing dirty and wet watch straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if you have sensitive skin or allergies. If you experience any skin irritation, please stop wearing the smart watch.
- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

1.6 REPLACING THE BATTERY

- 1. Detach the back cover:** Use an appropriate tool to loosen the four screws on the back of the watch. Carefully remove the battery from the compartment.
- 2. Insert new battery:** Insert a new CR2032H battery into the battery holder with the positive side facing up.
- 3. Reattach the cover:** Ensure the waterproofing lining is in place. Attach the bottom cover by tightening the screws securely.

WARNING:

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD: This product contains a button cell or coin battery. Swallowing the battery may cause serious injury or death.

If swallowed, a coin battery can cause internal chemical burns within as little as two hours. Keep both new and used batteries out of the reach of children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION:

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion. Risk of explosion if the battery is replaced by an incorrect type.

 


WARNING: BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON **131126** OR IN NEW ZEALAND ON **0800 764 766** OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.

2. PIXBEE WATCH FEATURES

2.1 STEP COUNT FUNCTION

2.1.1 TURNING ON/OFF THE STEP COUNT FUNCTION

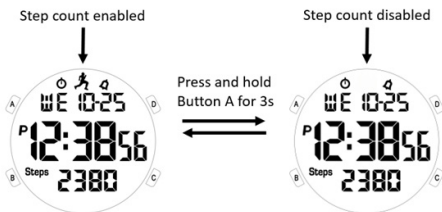


1. **Enabling step count:** Press and hold **Button A** for three seconds.

2. **Disabling step count:** Press and hold **Button A** for three seconds.

NOTE: The watch returns to time mode automatically after one minute of inactivity (no button press).

2.1.2 RESETTING STEP COUNT

 To clear your current step count, press and hold **Button B** for 3 seconds while in Time Mode.

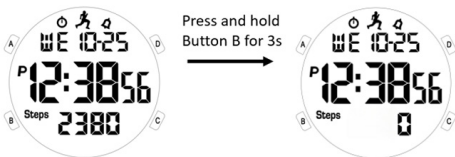

2.1.3 VIEWING STEP HISTORY

 


1. Press and hold **Button C** for 3 seconds to enter Step History Mode.
2. While in Step History Mode, press **Button D** to view previous daily step records.

2.2 DATE AND TIME SETTINGS

2.2.1 SETTING THE TIME AND DATE

NOTE: Grey text indicates that the character is in the selected state.

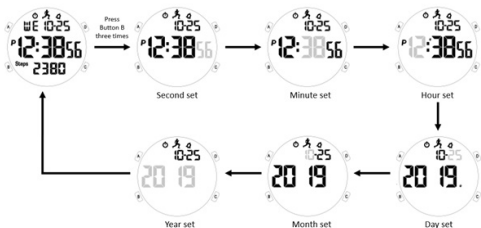

1. In normal time mode, press **Button B** briefly three times to enter **Time Setting Mode**. The 'seconds' digit will begin to flash.
2. Press **Button D** briefly to reset the **seconds** value to zero.

NOTE: Seconds reset: If the seconds value is between 30 and 59, the minutes value will automatically increase by one when the seconds are reset to 00. If the seconds value is between 00 and 29, the minutes value will remain unchanged.

 
3. Press **Button C** briefly to select the value you wish to adjust (Hour, Minute, Month, Date, Day of the Week).
4. Once the **Hour** value is selected and flashing, press **Button D** briefly to adjust the time, or press and hold **Button D** to adjust it quickly.

NOTE: Time format selection: Once the **Hour** value is selected and flashing, continue pressing **Button D** until either 'A' (AM) or 'P' (PM) appears (indicating 12-hour format), or 'H' appears (indicating 24-hour format).

5. Use **Button C** to cycle through the remaining settings (Minute, Hour, Day of the Month, Month, Day of the Week) and **Button D** to adjust them.
6. To complete the setting, press **Button B** briefly to confirm and return to normal time mode.


2.3 ALARM AND HOURLY CHIME

2.3.1 TURNING THE ALARM ON/OFF

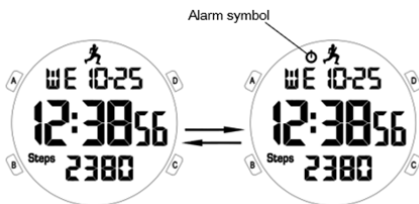

1. In normal time mode, press **Button C** and **Button D** simultaneously to toggle alarm on and off. When the alarm is enabled, an alarm symbol is displayed.

 2.3.2 TURNING THE HOURLY CHIME ON/OFF

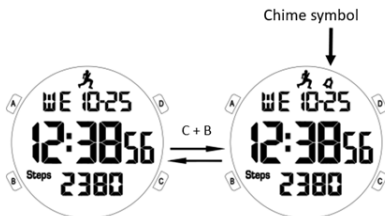

1. In normal time mode, hold down **Button C** first and short press **Button B** once to turn on hourly chime. Repeat the same procedure to turn off hourly chime. When hourly chime is enabled, a Chime symbol is displayed.

2.3.3 SETTING THE ALARM TIME

NOTE: Grey text indicates that the character is in the selected state.



1. In normal time mode, press **Button B** briefly twice to enter **Alarm Setting Mode**.
2. In **Alarm Setting Mode**, press **Button C** to select the value (Hour/Minute).
3. Press **Button D** briefly to adjust the value or press and hold **Button D** to adjust it quickly.
4. To complete the setting, press **Button B** to confirm and return to normal time mode.

2.4 STOPWATCH



2.4.1 USING THE STOPWATCH

1. In normal time mode, press **Button B** briefly once to enter **Stopwatch Mode**.
2. Press **Button D** briefly to start or pause timing.
3. When the stopwatch is paused or stopped, press **Button C** briefly to reset the stopwatch to zero.
4. Press **Button B** briefly to return to normal time mode.

2.4.2 TWO-PLAYER SPLIT TIMING

1. In **Stopwatch Mode**, press **Button D** to **start timing**.
2. Press **Button C** to enter the **split timing** state.
The 'SP' characters will change from 'ST'. This records the first player's finish time.
3. Next, press **Button D** to complete the timing for the second player.
4. Press **Button C** again to display the second player's timing.
5. Finally, press **Button C** one more time to clear the records and reset the stopwatch to zero.

3. SPECIFICATIONS

Battery Model	CR2032H
Battery Life	10-12 months (with 20 second alarm once a day, three second backlight activation three times a day)
Operating Voltage	3.0V
Operating Temperature	0°C to 40°C

4. SAFETY AND HANDLING

WARNING: Failure to follow safety instructions could result in fire, electric shock, injury or damage to your Pixbee watch or other properties and invalidate warranty.

DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD: This product contains a button cell or coin battery. Swallowing the battery may cause serious injury or death.

If swallowed, a coin battery can cause internal and chemical burns within as little as two hours. Keep both new and used batteries out of the reach of children.

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion. Risk of explosion if the battery is replaced by an incorrect type.
- To prevent watch failure, do not place the watch near extreme temperatures.
- Do not use the watch in saunas, hot springs, deep dives or high temperatures and high humidity environments.
- To prevent damage, do not subject the watch to sharp objects, impact and shock.
- To avoid damage and injury, do not attempt to disassemble, modify or repair the watch.
- Do not expose the watch to high temperatures for a prolonged period.

- If you find the watch particularly uncomfortable, please adjust the watch strap or remove it.
- Clean and dry the watch if exposed to fresh water, perspiration after workouts, or heavy sweating. Wearing dirty, wet straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if you have sensitive skin or allergies. If you experience any skin irritation, please stop wearing the watch.
- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

5. WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

Please scan this QR code for customer support:



5.1 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

5.2 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and

your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

5.3 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.



Smart Tech for Growing Explorers.

DIRECTED.

All Images, Information and Content are Copyright
© 2026 Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.pixbee.com.au | www.pixbee.co.nz