



## Nest Smart Alarm Clock

### User Manual



# CONTENTS

<b>INTRODUCTION</b> .....	<b>4</b>
FRONT VIEW .....	4
BACK VIEW.....	4
BASE VIEW.....	5
<b>FEATURES</b> .....	<b>6</b>
<b>WHAT'S IN THE BOX?</b> .....	<b>6</b>
<b>OPERATING MODES</b> .....	<b>7</b>
<b>QUICK START GUIDE IN NORMAL MODE</b> .....	<b>8</b>
DISPLAY BRIGHTNESS ADJUSTMENT .....	8
WAKE UP FUNCTION.....	8
PLAY FUNCTION.....	8
NAP FUNCTION .....	8
FALL-ASLEEP FUNCTION.....	8
SNOOZE FUNCTION.....	9
<b>QUICK START GUIDE (SET MODE)</b> .....	<b>9</b>
TIME SETTING .....	9
WAKE-UP SETTING.....	9
NAP SETTING .....	9
FALL-ASLEEP SETTING.....	9
PLAY SETTING.....	9
<b>QUICK START GUIDE IN LOCK MODE</b> .....	<b>10</b>
<b>APP OPERATIONS</b> .....	<b>13</b>
DOWNLOAD APP .....	13

<b>MOBILE PHONE CONNECT TO 2.4GHZ WIFI .....</b>	<b>13</b>
<b>MAKE ALARM CLOCK ENTER INTO WIFI CONNECTING MODE .....</b>	<b>15</b>
<b>CONNECT DEVICE TO APP .....</b>	<b>16</b>
<b>APP USAGE.....</b>	<b>19</b>
<b>1. HOME PAGE .....</b>	<b>19</b>
<b>2. SCREEN DISPLAY SETTING.....</b>	<b>20</b>
<b>3. LIGHT SETTING .....</b>	<b>21</b>
<b>4. ALARM CLOCK SETTING .....</b>	<b>22</b>
1. ALARM LIGHT SETTING .....	23
2. ALARM SOUND SETTING.....	24
3. ALARM EMOJI SETTING.....	25
<b>5. OTHER SETTINGS .....</b>	<b>26</b>
<b>FACTORY RESET.....</b>	<b>27</b>
<b>TIME AND 12/24-HOUR CLOCK.....</b>	<b>28</b>
<b>WAKE UP FUNCTION .....</b>	<b>29</b>
ALARM ON/OFF/STOP/SNOOZE .....	29
WAKE-UP ALARM SETTING.....	30
<b>FALL-ASLEEP FUNCTION.....</b>	<b>33</b>
FALL-ASLEEP ON/OFF/STOP/SNOOZE.....	33
FALL-ASLEEP FUNCTION SETTING .....	34
<b>PLAY FUNCTION.....</b>	<b>36</b>
PLAY ALARM ON/OFF/STOP/DELAY .....	36
PLAY FUNCTION SETTING .....	38

<b>NAP FUNCTION</b> .....	<b>40</b>
NAP ON/OFF .....	40
NAP FUNCTION SETTING .....	42
<b>VOLUME/BRIGHTNESS ADJUSTMENT</b> .....	<b>44</b>
<b>DISPLAY BRIGHTNESS ADJUSTMENT</b> .....	<b>45</b>
<b>LIGHTING FUNCTION</b> .....	<b>45</b>
<b>SPECIFICATIONS</b> .....	<b>46</b>
<b>CAUTION</b> .....	<b>47</b>
<b>FREQUENTLY ASKED QUESTIONS</b> .....	<b>48</b>
<b>WARRANTY TERMS AND CONDITIONS</b> .....	<b>49</b>
INDEMNITY .....	50
WARRANTY AND WARRANTY DISCLAIMER.....	50
LIMITATIONS OF LIABILITY .....	52
<b>NOTES</b> .....	<b>53</b>

#### **PRECAUTION**

- Please read this manual carefully before using the clock and keep it in a safe place for future reference.
- Before using the clock, remove the pull tab on the battery compartment and then connect the adapter to turn on the alarm clock.


## INTRODUCTION

### FRONT VIEW

Snooze/night light

Indicator light

Display

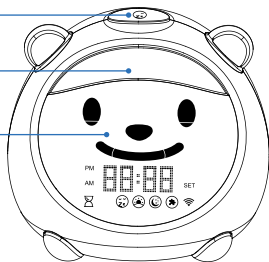


**\*The ears and the feet  
cannot be dissembled**


### BACK VIEW

Rear speaker

Micro USB input

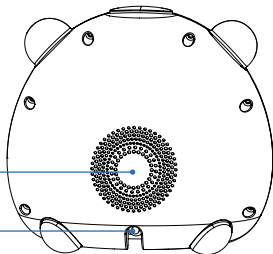

## BASE VIEW

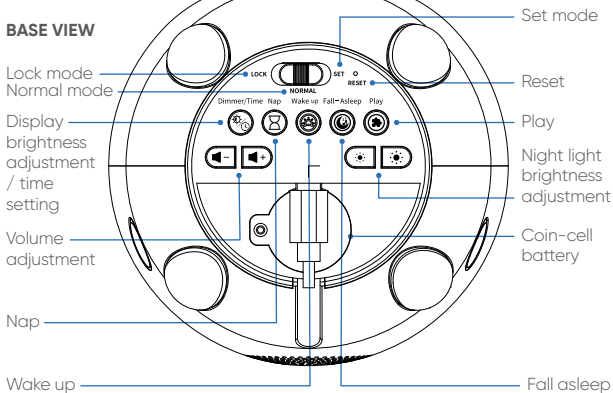

## FEATURES

- Sleep training, alarm clock, sleeping function, night light and timer functions.
- Helps kids fall asleep, play, and wake up with the functions of dynamic expressions, light colours and specific sound effects.
- Mobile app remote control is easy to use.
- Silent operation and multiple music choices.
- Playfully designed, high-quality, and affordable.


## WHAT'S IN THE BOX?



Alarm clock




User guide

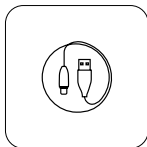

Charging cable

## OPERATING MODES

When the power is connected, toggle the switch to enter different modes and perform corresponding operations. There are three working modes:

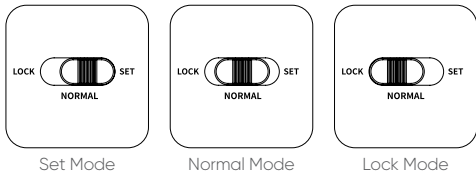

Set Mode

Normal Mode

Lock Mode

**Set Mode:** Toggle the switch to Set position, the device will be in the setting state and displays the time and function icons only.

**Functions:** Set the time (including time adjustment and 12/24-hour clock), countdown / wake up / sleep / play (including the duration, sound effect, light colour, and light on prior to alarm time).

**Normal Mode:** Toggle the switch to Normal position, the device will be in normal state that displays the time, facial expression and the function icons. You can turn on / off / delay the functions of a countdown, wake up, fall asleep and play or adjust the display brightness, alarm volume, and indicator brightness.

**Child Lock Mode:** Toggle the switch to Lock position to lock the alarm clock. Only the facial expression appears on the display in this mode. The function keys will only work for volume, display brightness, and snooze (night light).


You can set multiple groups of alarms through the app and turn them on or off through the app with a press of any function key. Only one alarm can be set through physical keys.

## QUICK START GUIDE IN NORMAL MODE







Toggle the switch to  
NORMAL position





### DISPLAY BRIGHTNESS ADJUSTMENT

1. Press  to adjust or turn off the brightness.





### WAKE UP FUNCTION

1. ON: Press , the wake-up time displays; the  icon will flash for three seconds and then the display returns to the normal time display.
2. OFF: Press  again, and the  icon disappears.





### PLAY FUNCTION

1. ON: Press , the play time displays; the  icon flashes for three seconds and then the display returns to normal time display.
2. OFF: Press  again, and the  icon disappears.



### NAP FUNCTION

1. Start: Press , the countdown starts and the  icon appears.
2. Stop: Press  again, the countdown stops and the  icon disappears.

### FALL-ASLEEP FUNCTION

1. ON: Press , the fall-asleep time displays; the  flashes for three seconds and then the display returns to the normal time display.
2. OFF: Press  again, and the  icon disappears.

## SNOOZE FUNCTION





1. When no alarm is triggered: Press  to turn on or off the light.
2. When the alarm starts sounding: Press  to delay the alarm.

## QUICK START GUIDE (SET MODE)







**Toggle the switch to SET position** After the setting is completed, toggle the switch to Normal position.




### **TIME SETTING**

1. Press , press   to adjust the setting, press  again to complete the setting.





### **WAKE-UP SETTING**

1. Press , press   to adjust the setting, press  again to complete the setting.





### **NAP SETTING**

1. Press , press   to adjust the setting, press  again to complete the setting.

### **FALL-ASLEEP SETTING**

1. Press , press   to adjust the setting, press  again to complete the setting.


### **PLAY SETTING**

1. Press , press   to adjust the setting, press  again to complete the setting.

## QUICK START GUIDE IN LOCK MODE



The facial expression and the corresponding indicator light will be displayed in Lock mode. When Lock mode is enabled, the function keys will not work except for the following features: volume, display brightness, and snooze (night light).

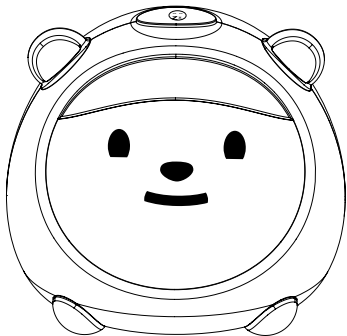

1. When the alarm starts sounding: Press to delay the alarm; press the / to adjust the volume, and press / to adjust the brightness.
2. When no alarm is triggered: Press to turn the indicator light on or off.

**Note:** The facial expressions shown are in default state; you can customise the facial expression through the app.



Normal state



Changed expression



Wake-up state




Changed expression



Play state



Changed expression

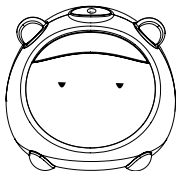

Fall-asleep state



Changed expression



Snooze state



Changed expression



Nap state



Changed expression

## APP OPERATIONS

### DOWNLOAD APP

Download Pixbee 'Smart Life' from App Store/ Google Play or Scan the QR code, sign up and log in.



### MOBILE PHONE CONNECT TO 2.4GHZ WIFI

**Connect your smart phone to a 2.4 GHz WiFi network during setup**

1. If you're connecting your Pixbee Nest Smart Alarm Clock directly to your router's WiFi network, it's important to understand that your smart phone must connect to the same WiFi network as the alarm clock during setup.

**Note:** Once the alarm clock is successfully connected to WiFi, your phone can use other networks at will, without having to be connected to the same WiFi as the alarm clock.

2. Your alarm clock can only connect to a 2.4 GHz WiFi network. Many routers broadcast WiFi networks in both 2.4 GHz and 5 GHz bands, so your phone might connect to the 5 GHz WiFi band. During setup, connect your phone to your 2.4 GHz WiFi network, then connect your Kids' Alarm Clock to that same 2.4 GHz WiFi network.

## Find your 2.4 GHz WiFi network name and password

Your phone might connect to your 5 GHz WiFi network most of the time. If you're not sure about how to find the 2.4 GHz WiFi network:

1. Look on your WiFi router label.

Many routers have a label that shows the WiFi network name, which is also called an SSID.

Your 2.4 GHz network name might have a 2, 2.4, or 2G at the end. Your 5 GHz network name might have a 5 or 5G at the end. If you changed your WiFi settings, then check the place where you saved your custom settings.

2. If your WiFi network name or SSID doesn't indicate whether it's 2.4 GHz or 5 GHz, ask your internet service provider (ISP) or the person who set up your WiFi router or refer to the video below to find the answer by scanning the QR code..



Split WiFi into dual band  
2.4GHz & 5GHz

## Connect your phone to a 2.4 GHz network


1. Turn on your phone's WiFi.
2. Select a 2.4 GHz WiFi network.

This is commonly indicated by a 2, 2.4, or 2G at the end of the network name.

3. If prompted, enter the password for the network.

## ENTER ALARM CLOCK INTO WIFI CONNECTING MODE INTO WIFI CONNECTING MODE

1. Plug in to power, the flashing  indicates the device is now under WiFi connecting mode.
2. If  stays solid or hidden, long-press  till  flashes to enter WiFi connecting mode.

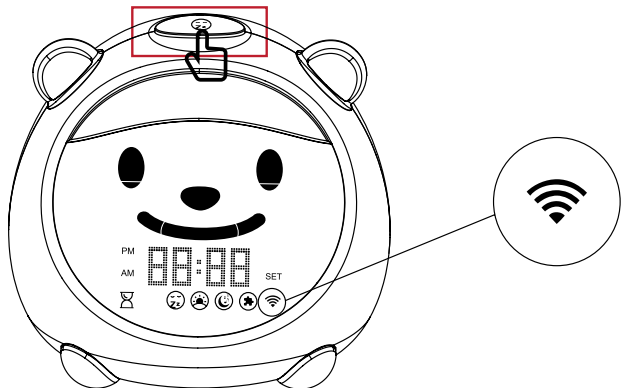


## CONNECT DEVICE TO APP

### Note:

1. Turn on GPS location, WiFi (2.4 GHz only) and bluetooth on your smartphone before connecting device to your WiFi (2.4GHz only).
2. Make sure the alarm clock has entered the **WiFi Connecting Mode** (please refer to the previous point - **Make Alarm Clock Enter into WiFi Connecting Mode**) - the flashing WiFi icon shows the device is ready to connect to WiFi (2.4GHz only).

1. Open up Pixbee Smart Life app, Click on **Go to add**.

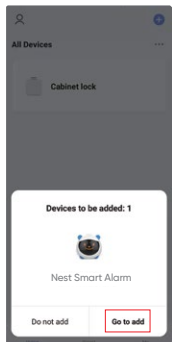

2. If the add page does not pop up, click **Add Device**.




3. Click on **Add**.




4. Type in the 2.4 GHz WiFi password and click on **Next** (make sure the smartphone and Smart Life app are both connected to 2.4 GHz WiFi).




5. After the device has successfully connected to your 2.4GHz WiFi, click **Next**;

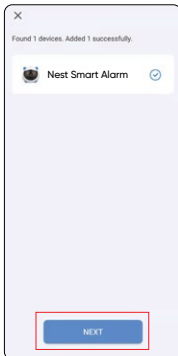

6. You can re-name the device after it has successfully connected to your 2.4 GHz WiFi, click on **Done** to complete the WiFi setup process.

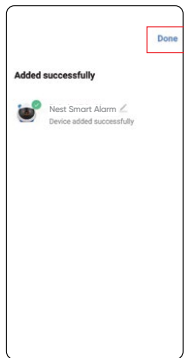

7. You can see the added device, click **Nest Smart Alarm** enter to Home Page.

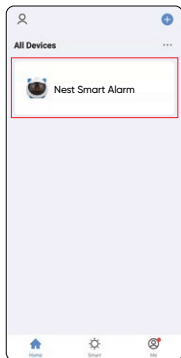

## APP USAGE

 
### 1. HOME PAGE

Adjust the volume when alarm clock starts

Light setting

Wake alarm switch/setting

Sleep alarm switch/setting

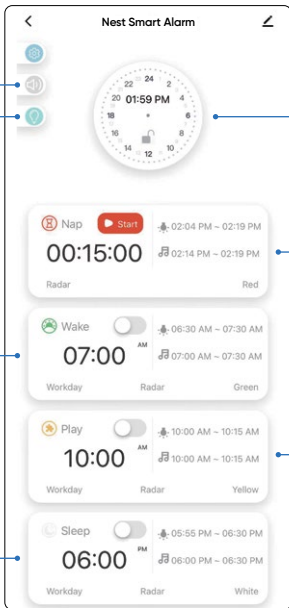


Screen display setting



Nap alarm switch/setting

Play alarm switch/setting


## 2. SCREEN DISPLAY SETTING

 
1. Click  to enter the detailed settings.
2. Device automatically calibrates with real time after successful WiFi connection. You can also manually calibrate the time and switch between the 12-hour clock and 24-hour clock on the app..

Screen display setting

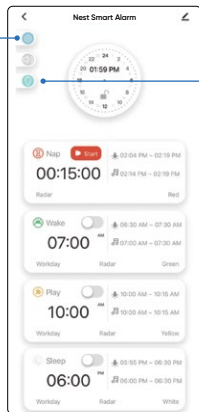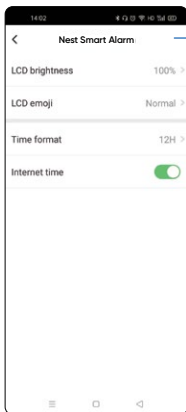


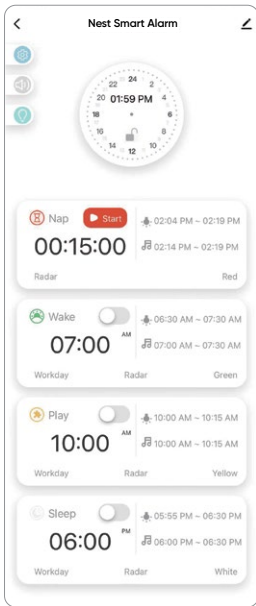 
Light setting

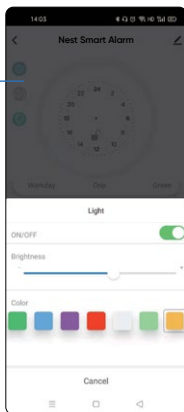

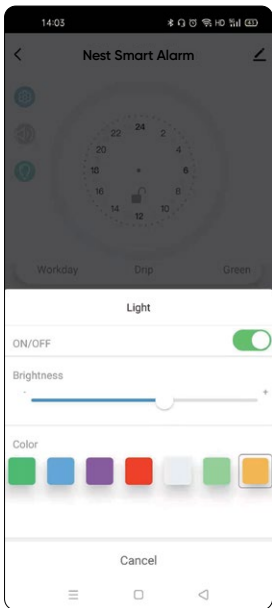

### 3. LIGHT SETTING

1. Click  to enter light setting page.
2. You are able to turn on/off light, select color and adjust brightness.



#### 4. ALARM CLOCK SETTING


**Note:** There are four alarms in total (Nap, Wake, Play, Sleep), and the way of setting four alarms is the same. If you want to set alarm clock manually by buttons, please refer to instructions on Page 29.

— Nap

— Wake

— Play

— Sleep

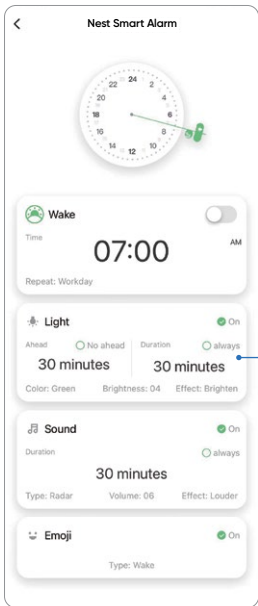

## 1. ALARM LIGHT SETTING

Select between **Ahead** and **No ahead**.


- **Ahead:** The light turns on before the alarm time with a range between five and 120 minutes.  Ahead  No ahead  
30 minutes

- **No ahead:** The light is not turned on before the alarm time.  Ahead  No ahead  
No ahead


Select between **Duration** and **always**.

- **Duration:** Select the lighting-alarm time range between five and 120 minutes.  Duration  always  
30 minutes

- **Always:** The light turns off until you, operate it.  Duration  always  
always

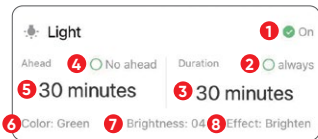

 
**Note:** Eight functions can be adjusted.

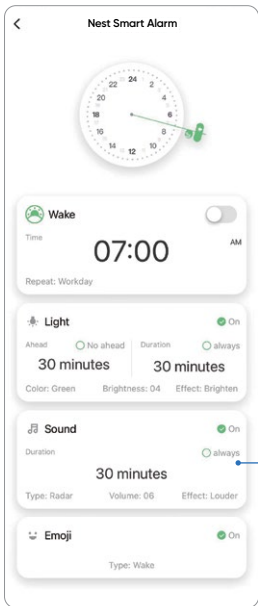


## 2. ALARM SOUND SETTING

Select between **Duration** and **Always**.

 - **Duration:** Select the sound alarm time range between five and 120 minutes. (eg: Alarm automatically turns off when 30-minute time's up).



- **Always:** The alarm will be active until you turn it off.

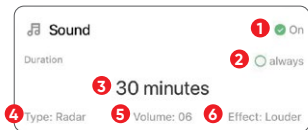


**Note:** Six functions can be adjusted.




### 3. ALARM EMOJI SETTING

You can activate/deactivate the alarm emoji and choose different emoji types.


Normal

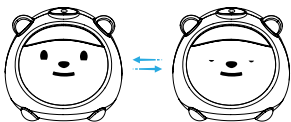


Wake 😊

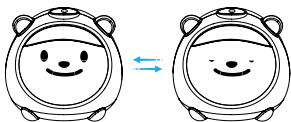


Play 🎮

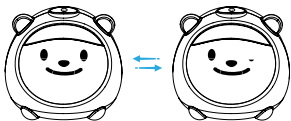


Sleep 😴

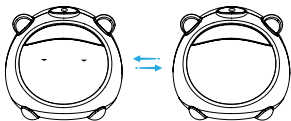

Deep sleep 😴

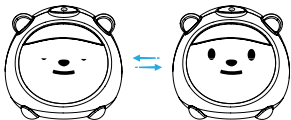


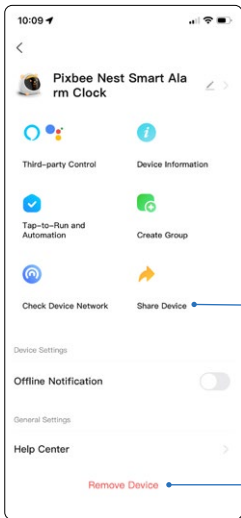
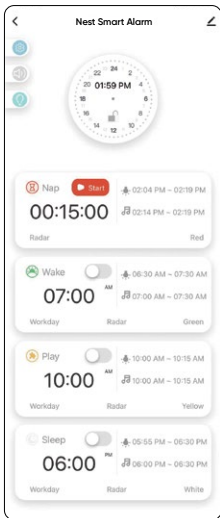
Time's up ⌚

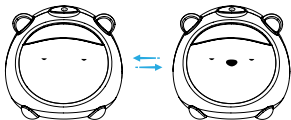

**Note:** You can customise the facial expressions through the app.

## 5. OTHER SETTINGS

Click  to enter detailed setting.




**Share device:**  
You can share the Kids Alarm with family members so that mother and father all can control it.


**Remove device:**  
Remove device from your APP.



## FACTORY RESET

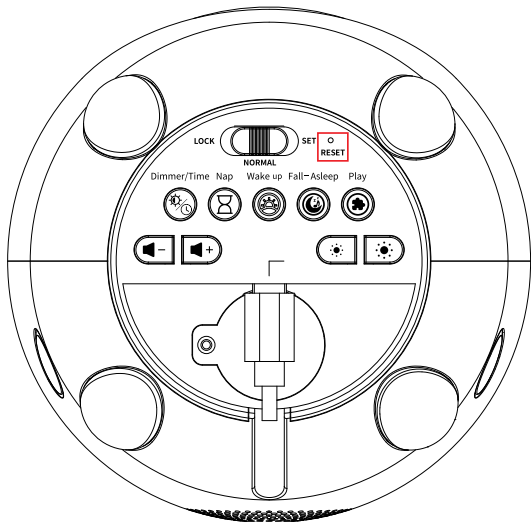
Insert a pin to the Reset hole to restore the alarm clock to its original setting.



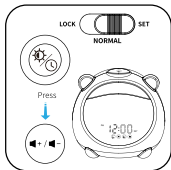


## TIME AND 12/24-HOUR CLOCK



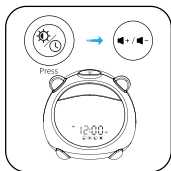


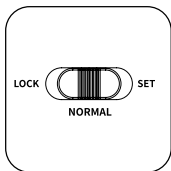
1. Toggle the switch to the Set setting mode, press  to set the time. The 'hour' flashes in the display, adjust the hour by pressing .

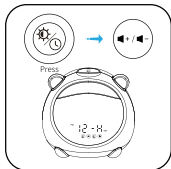

2. Press  to enter the minute setting. The 'minute' flashes in the display, adjust the minute by pressing .





3. Press  to enter the 12/24-hour clock setting, the '12-H' flashes in the display; select 12H/24h by pressing , and then press  to complete the setting.




4. After the setting is completed, toggle the switch to Normal or Lock.

## WAKE UP FUNCTION ALARM ON/OFF/STOP/SNOOZE




1. ON: Toggle the switch to Normal setting mode, press , the wake-up time and  icon in the display flashes for three seconds.

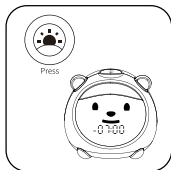




2. OFF: Press  again and the  icon disappears.



3. Stop: When the alarm time is reached and the alarm starts sounding, press  to stop the alarm. The alarm clock will automatically stop after 30 minutes if no response.

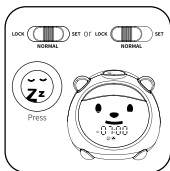
**Note: This will not affect its operation the next day.**




4. Snooze: The switch should be toggled to Normal or Lock position; press  when the alarm starts sounding, the  and  icon flash. The alarm snoozes and starts ringing nine minutes later.




**Note: Snooze five times maximum; the alarm automatically stops after the fifth time.**

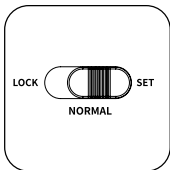
## WAKE-UP ALARM SETTING

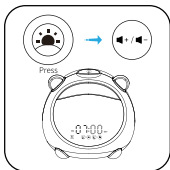


1. Toggle the switch to SET.



2. Hour setting: Press , the  icon and the 'hour' will flash, adjust the hour by pressing .

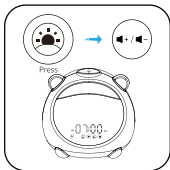


3. Minute setting: Press , the 'minute' flashes, adjust the minute by pressing .

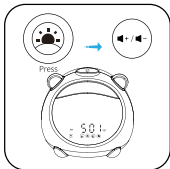




4. Sound setting: Press , the 'S- 01' flashes, adjust the sound by pressing .

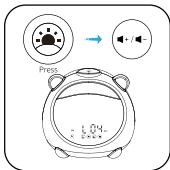
**Note: You can choose between ten sound effects: S01 - S10 Sound Off: S00. And ten sound levels: V01 - V10.+ Run the sentences together**

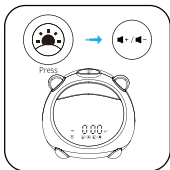

5. Brightness setting: Press , the 'L-04' flashes. Use  to adjust the brightness, press  to complete the setting, and the  icon appears. **Note: The light colour Green.5 has adjustable brightness levels: L-01~L05.**



6. Light turns on prior to the alarm time: Press , the 'minute' flashes, adjust the minute using . **Note: The maximum time for the light to turn on prior to the alarm time is 120 minutes. If you set it to 0 minute, the light will not turn on prior to the alarm time.**

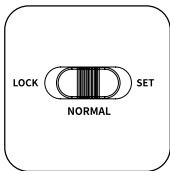



7. After the setting is completed, toggle the switch to Normal or Lock mode.

## FALL-ASLEEP FUNCTION


### FALL-ASLEEP ON/OFF/STOP/SNOOZE




1. ON: Toggle the switch to Normal position, press  the wake-up time and the  icon in the display will flash for three seconds.




2. OFF: Press  again and the  icon disappears.

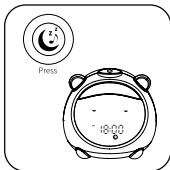

3. Stop: When the alarm time is reached and the alarm starts sounding, press  to stop the fall-asleep function.


**Note: The alarm clock will automatically stop after 30 minutes if no response and this will not affect its operation the next day.**

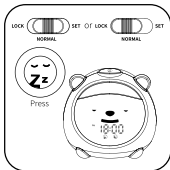


4. Snooze: The switch should be toggled to Normal or Lock position; press  when the alarm starts sounding, and the  and  icon will flash. The fall-asleep function delays for nine minutes.

**Note: Delay five times maximum; the alarm automatically stops after the fifth time.**


## FALL-ASLEEP FUNCTION SETTING

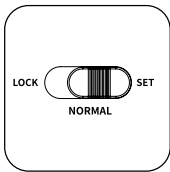


1. Toggle the switch to Set.

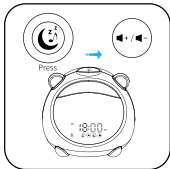

2. Hour setting: Press  to enter the hour setting, fall-asleep setting, the  icon and the 'hour' on the display flashes; press  to adjust the 'hour'.

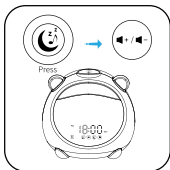


3. Minute setting: Press to enter the minute setting, the icon and 'minute' on the display will flash, press to adjust the 'minute'.

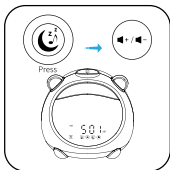

4. Sound effect setting: Press to set the sound effect, the 'S-01' on the display flashes; use to choose the 'sound'.


**Note: You can choose between ten fall-asleep sound effects: S01 – S10 Sound Off: S00.**

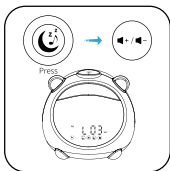

**And ten sound levels: V01 – V10.**




5. Brightness setting: Press , the 'L-03' flashes; use to adjust the brightness. Press to complete the setting, the icon appears.

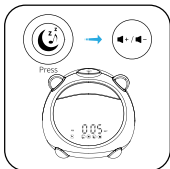**Note: Light colour Warm White has five adjustable brightness levels: L-01–L-05. Light OFF: L-00.**




6. Light turns on prior to the alarm time: Press , the 'minute' flashes, adjust the minute using +/.


**Note: The maximum time for the light to turn on prior to the alarm time is 120 minutes. If you set it to 0 minute, the light will not turn on prior to the alarm time.**

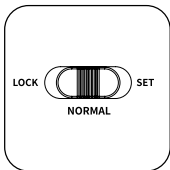

7. After the setting is completed, toggle the switch to Normal or Lock position.

## PLAY FUNCTION PLAY ALARM ON/OFF/STOP/DELAY

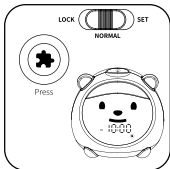


1. ON: Toggle the switch to Normal position, press , the play time and  icon in the display will flash for three seconds.






2. OFF: Press  again and the  icon disappears.



3. Stop: When the play time is reached and the alarm starts sounding, press  to stop the fall-asleep function.


**Note: The alarm clock will automatically stop after 30 minutes if no response and this will not affect its operation the next day.**




4. Delay: The switch should be toggled to Normal or Lock position; press  when the play alarm starts sounding, the  and  icon will flash. The play function delays for nine minutes.

**Note: Delay five times maximum; the alarm automatically stops after the fifth time.**


## PLAY FUNCTION SETTING

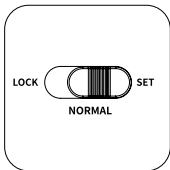


1. Toggle the switch to Set.

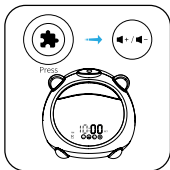

2. Hour setting: Press , the  icon and the 'hour' will flash. Adjust the hour by pressing +/.

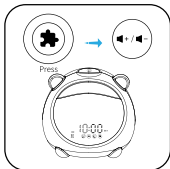


3. Minute setting: Press , the 'minute' flashes; adjust the minute by pressing +/.

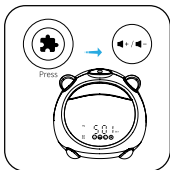


4. Sound setting: Press , the 'S-01' flashes; adjust the sound using .

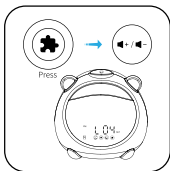

**Note: You can choose between ten sound effects: S01 - S10 Sound Off: S00. And ten sound levels: V01 - V10.**




5. Brightness setting: Press , the 'L-04' flashes; use  to adjust the brightness. Press  to complete the setting, the  icon appears.

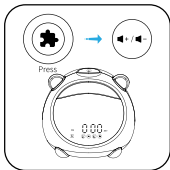**Note: There are five adjustable brightness levels: L-01~L-05. Light OFF: L-00.**



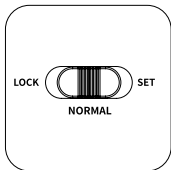

6. Light turns on prior to the alarm time: Press , the 'minute' flashes, adjust the minute using .
- Note: The maximum time for the light to turn on prior to the alarm time is 120 minutes. If you set it to 0 minute, the light will not turn on prior to the alarm time.**






7. After the setting is completed, toggle the switch to Normal or Lock position.


## NAP FUNCTION NAP ON/OFF



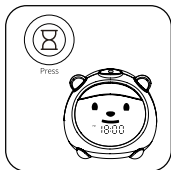


1. ON: Toggle the switch to Normal, press , the  icon in the display appears, the nap will be displayed.

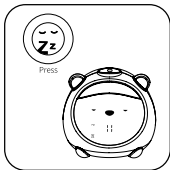


2. OFF: Press  again and the  icon disappears, the normal time will be displayed.




3. Pause: When the nap function is enabled, press  on the top of the clock, the nap pauses and the  will be displayed.

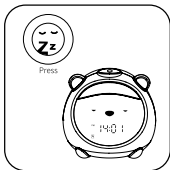


4. Resume: Press  again to resume the nap.  
**Note: If the pause time lasts longer than the setting time, the countdown will automatically stop.**


## NAP FUNCTION SETTING

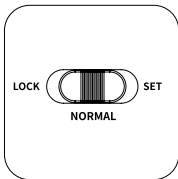


1. Toggle the switch to Set

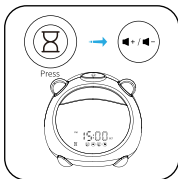

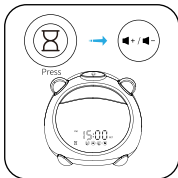


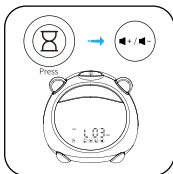
2. Minute setting: Press , the  icon and 'hour' will flash. Adjust the minute by pressing +/.



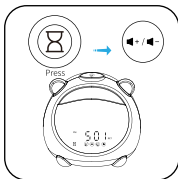




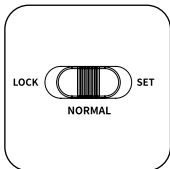
3. Second setting: Press , the 'second' flashes; adjust the seconds by pressing +/.



4. Sound setting: Press , the 'S-01' flashes; adjust the sound using +/- ;
- Note: You can choose between ten sound effects: S01 - S10 Sound Off: S00. And ten sound levels: V01 - V10.**



5. Brightness setting: press , the 'L-03' flashes; use +/- to adjust the brightness. Press  to complete the setting, the  icon appears.
- Note: Light colour Red provides five adjustable brightness levels: L-01~L-05. Light OFF: L-00.**




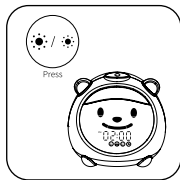
6. After the setting is completed, toggle the switch to Normal or Lock position.

## VOLUME/BRIGHTNESS ADJUSTMENT

When the alarm is activated in Normal mode or Lock mode, the volume and brightness can still be adjusted.



1. When the alarm is sounding, press  to adjust the volume.



2. When the alarm is sounding, press  to adjust the brightness.

## DISPLAY BRIGHTNESS ADJUSTMENT



Dim light



Low light




Medium light




Bright light





Turn off

Press  to adjust the brightness in Normal mode or Lock mode. There are five light levels: dim, low, medium, bright and off. Bright light is the default brightness setting.
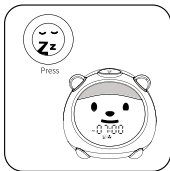
## LIGHTING FUNCTION



When the alarm is not triggered, press , the amber indicator light is on, press  again, the amber indicator light is off.

## SPECIFICATIONS

<b>Product name</b>	Nest Smart Alarm Clock
<b>Product size</b>	103x104x102mm
<b>Product weight</b>	168g
<b>Material</b>	PC+ABS+Silica gel
<b>Child lock</b>	Function supported
<b>Light</b>	Warm white + RGB
<b>Volume</b>	10 levels
<b>Stereo speaker</b>	2W 8Ω
<b>Power input</b>	5V 1A
<b>Snooze time</b>	5-20MIN
<b>Coin-cell battery</b>	CR2032

## CAUTION

- Place the product on a stable, flat, and non-slip surface.
- Do not disassemble the product as it is composed of fragile components.
- Do not use the product in rooms where the temperature is below 0°C or above 40°C.
- Only clean the alarm clock with a soft and dry cloth.
- Do not use abrasive cleansers, cleansing pads or cleansers such as alcohol or acetone, as this may damage the surface of the product.



**CAUTION:** Lithium button /coin cell batteries are hazardous whether new or used! Keep batteries away from children. If swallowed or placed inside any part of the body, batteries can cause severe or fatal injuries in 2 hours or less. Seek immediate medical attention if suspected.

Any replacement of the internal battery is intended to be made by the manufacturer, its service agent or similarly qualified person.

## FREQUENTLY ASKED QUESTIONS

### 1. Why can't I turn the alarm clock on?

Connect the adapter to activate the alarm clock for the first use.

### 2. Does the alarm clock need to be connected to the adapter all the time to work?

The Pixbee Nest Smart Alarm Clock does not have a built-in battery so it needs to be connected to a power supply via USB all the time.

### 3. Why didn't the alarm go off?

Check the display to confirm there is a wake up alarm icon in the normal mode. Then press the wake up alarm button to check if the set alarm time is correct and if the volume is set to S-00.



### 4. Can the light colour be changed?

The light colour in wake-up/fall-asleep/nap mode cannot be changed, you can only turn on or off the light. The play mode has a changing colourful light, you can also turn this light on or off.

### 5. How many kinds of sound effects are there and can I change it?

There are ten choices of built-in sound effects, including four fall-asleep sounds, two wake-up sounds, two play sounds, and two countdown sounds. The built-in sound effects can't be changed.

### 6. Can I adjust the volume?

There are ten levels of sound volume. You can press +/- to adjust the it when the alarm rings. The default sound volume cannot be changed.

## **WARRANTY TERMS AND CONDITIONS**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code  
for customer support:**



## **INDEMNITY**

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

## **WARRANTY AND WARRANTY DISCLAIMER**

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as

permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

### **LIMITATIONS OF LIABILITY**

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.









V1.0

Smart Tech for Growing Explorers.

**DIRECTED**®

All Images, Information and Content are Copyright ©  
2026 Directed Electronics Australia Pty Ltd.  
All Rights Reserved.

[www.directed.com.au](http://www.directed.com.au) | [www.directed.co.nz](http://www.directed.co.nz)



[www.pixbee.com.au](http://www.pixbee.com.au) | [www.pixbee.co.nz](http://www.pixbee.co.nz)