



Luma Sunrise Alarm Clock

With RGB lighting, speaker and charger.

User Manual

CONTENTS

1.0	WHAT'S IN THE BOX?	2
2.0	HOW THE BUTTONS WORK	2
3.0	PRODUCT SPECIFICATIONS	2
4.0	OPERATING INSTRUCTIONS	3
5.0	LIGHTING SELECTIONS	3
6.0	CONNECTING A TF CARD OR USB DISK	3
7.0	SETTING THE CLOCK	3
8.0	SETTING THE ALARM CLOCK	3
9.0	SELECTING WHITE NOISE SOUND	4
10.0	SETTING FM RADIO	4
11.0	CHARGING THE ALARM CLOCK LED AND SPEAKER DEVICE	4
12.0	CHARGING YOUR SMART PHONE, EARBUDS OR SMART WATCH	4
13.0	GENERAL SAFETY ADVICE	4
14.0	IMPORTANT INFORMATION	5
15.0	WARRANTY TERMS AND CONDITIONS	5
15.1	INDEMNITY	5
15.2	WARRANTY AND WARRANTY DISCLAIMER	5
15.3	LIMITATIONS OF LIABILITY	6

1.0 WHAT'S IN THE BOX?

1 × Red, Green and Blue (RGB) Light with Speaker Device

1 × Wireless Charging Pad

1 × Type-C Input Cable

2.0 HOW THE BUTTONS WORK



Long press: Power On/Off. Short press: Light mode switch.



Long press: Switch between BT, White Noise, FM, TF, USB mode.
Short press: Pause and play music.



Short press: Turn On/Off timer, and select timing between 15/30/60 minutes (applicable to all modes). Long press: True Wireless Stereo (TWS) connection.



Short press: Next song. Long press: Volume up.



Short press: Last song. Long press: Volume down.



Alarm setting.




Clock setting.

3.0 PRODUCT SPECIFICATIONS

- Bluetooth version: 5.3
- Speaker: 2*8W (16W)
- Working distance: 10 Meters
- Wireless charging input: 5V = 2A, 9V = 2A
- Wireless charging output: 15W (Max) for phone; 3W(Max) for earbuds; 2.5W (Max) for smart watches
- Battery capacity: 3.7V/1800mAh
- Bluetooth frequency: 2.4GHz - 2.48GHz
- Charging for speaker input: 5V = 1A
- Charging time: 2 - 4 hours
- Playing Time: Approximately 3 hours
- Frequency Response: 50Hz- 20KHz

4.0 OPERATING INSTRUCTIONS

Power On/Off.

Long press the  button for two seconds to power on the device.


The default warm light will turn on at start-up.

Connect the speaker to Bluetooth.

1. Turn on your smartphone's Bluetooth and search for the device. The Bluetooth name **Luma** will then appear on your smartphone.
2. Connect with the model by clicking the name on the smartphone. You will hear a tone that indicates successful connection.
3. Next time, the smartphone will automatically connect.

5.0 LIGHTING SELECTIONS





The alarm clock is equipped with ten lighting modes.

1. At start-up, the default warm light effect will be activated.
2. Short press the  button to switch the lighting effects.






6.0 CONNECTING A TF CARD OR USB DISK

Insert the TF card or USB disk into the card slot. A voice prompt will confirm the insertion. The device will automatically read and play the audio files from the card. Use the speaker and alarm clock buttons to control the music.






7.0 SETTING THE CLOCK

1. Press  button to enter the hour/minute setting mode.
2. Press  and  buttons to adjust the hour and minute.
3. Long press  button to switch between 12H or 24H mode.







8.0 SETTING THE ALARM CLOCK

1. Press  button to enter and switch the alarm's hour/minute setting mode.
2. Press  and  buttons to adjust the hour and minute.
3. Press  button again to select your preferred alarm sound from 12 options.
4. Press  button once more to activate the alarm - an alarm icon will appear on the screen.
5. To stop the alarm when it rings, press any key. If not turned off manually, the alarm will automatically stop after one minute.
6. The alarm will ring even if the device is powered off. To cancel the alarm, long press the alarm key - the alarm icon will disappear.

9.0 SELECTING WHITE NOISE SOUND

1. Long press  button for Nature Sound mode and the display will show NS icon light.
2. Press  button to select your preferred sleep and relaxation track from the 12 options.
3. Short press  button for next sound and long press to increase the volume.
4. Short press  button for last sound and long press to decrease the volume.
5. Short press  button to pause or play the sound.

10.0 SETTING FM RADIO

1. Long press  button for FM mode.
2. Insert the Type-C charging cable into the charging port to act as an antenna and leave the other end unconnected.
3. Short press  button to enter FM channel automatic searching and automatic saving.
4. Short press  and  buttons to select the next or last saved FM channel.
5. Long press  and  buttons to increase or decrease volume.

11.0 CHARGING THE ALARM CLOCK LED AND SPEAKER DEVICE

1. Wireless charging via the pad:
Connect the wireless charging pad to a power source using the Type-C cable, the LED indicator beside the input port will glow blue. Then, placing your device on the pad will automatically charge it wirelessly.
2. Charging via USB-C cable direct:
Connect Type-C cable to the alarm clock or speaker device directly and it'll start charging.

12.0 CHARGING YOUR SMART PHONE, EARBUDS OR SMART WATCH

1. Connect the wireless charging pad to a power source using the Type-C cable, the LED indicator beside the input port will glow blue.
2. Place your device in the center of the charging pad, the LED indicator will glow red and it will start charging.

Notice: To charge your smart phone, earbuds or smart watch via the charging pad, please use QC 3.0 charger (not included) and the 2A quick charge cable (included).

13.0 GENERAL SAFETY ADVICE

- Please read this manual thoroughly before you start using your alarm clock.
- Store this manual, the completed warranty card, your receipt and the product packaging for future reference if required.
- The safety precaution instructions help reduce the risk of fire, electric shock and injury when complied to correctly.
- Please follow all instructions and take notice of all warnings.

14.0 IMPORTANT INFORMATION

- Only use furniture that can safely support your alarm clock.
- Ensure the alarm clock doesn't overhang the edges of supporting furniture.
- Don't place the alarm clock on unstable or unsecured and tall furniture.
- Don't place the alarm clock on cloth or other heat-sensitive materials.
- Warn children about the dangers of climbing on furniture to reach the alarm clock or its controls.

15.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

Please scan this QR code for customer support:



15.1 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

15.2 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or

services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

15.3 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.



Smart Tech for Growing Explorers.

DIRECTED

All Images, Information and Content are Copyright ©
2026 Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.pixbee.com.au | www.pixbee.co.nz