



Atmos

5-in-1 Alarm Clock

User Manual

CONTENTS

1.0 GENERAL SAFETY ADVICE.....	2
2.0 IMPORTANT INFORMATION.....	3
3.0 WHAT'S IN THE BOX?.....	3
4.0 ALARM CLOCK OVERVIEW.....	4
4.1 WIRELESS CHARGER OPERATIONS.....	6
4.2 CONNECTING TO BLUETOOTH.....	6
4.3 TRUE WIRELESS STEREO (TWS) FUNCTION.....	7
4.4 FM RADIO FUNCTION.....	7
4.5 CONNECTING A TF CARD OR USB STICK.....	8
4.6 LISTENING TO NATURE SOUNDS.....	8
4.7 SETTING THE CLOCK.....	9
4.8 SETTING THE ALARM.....	9
5.0 PRODUCT SPECIFICATIONS.....	10
6.0 TROUBLESHOOTING.....	11
7.0 WARRANTY TERMS AND CONDITIONS.....	12
7.1 INDEMNITY.....	13
7.2 WARRANTY AND WARRANTY DISCLAIMER.....	14
7.3 LIMITATIONS OF LIABILITY.....	17

1.0 GENERAL SAFETY ADVICE

Please read this manual thoroughly before you start using your alarm clock radio. Store this manual, the completed warranty card, your receipt and the product packaging for future reference if required.

The safety precaution instructions help reduce the risk of fire, electric shock and injury when complied to correctly.

Please follow all instructions and take notice of all warnings.

2.0 IMPORTANT INFORMATION

- Only use furniture that can safely support the alarm clock.
- Ensure the alarm clock is not overhanging the edge of supporting furniture.
- Do not place the alarm clock on tall furniture without securing both the furniture and the device to a stable support.
- Do not place the alarm clock on cloth or other heat sensitive materials.
- Warn children of the dangers of climbing on furniture to reach the alarm clock or its controls and to always seek adult assistance.


3.0 WHAT'S IN THE BOX?

1 x Atmos 5-in-1 Alarm Clock

1 x USB-C charging cable

1 x Instruction manual

4.0 ALARM CLOCK OVERVIEW

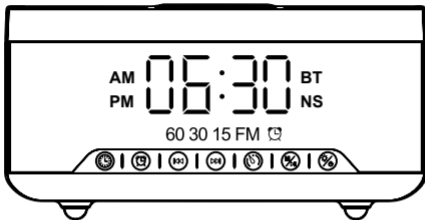





Long press: Power On/Off.
Short press: Light mode switch.




Long press: Switch between Bluetooth (BT), Natural Sounds (NS), Radio Stations (FM), TF, USB, AUX mode.
Short press: Pause and Play music.



Short press: Turn On/Off timer shutdown, and select timing between 15/30/60 minutes (applicable to all modes).
Long press: True Wireless Connection (TWS) connection.

-  Short press: Next song.
Long press: Volume up.
-  Short press: Previous song.
Long press: Volume down.
-  Alarm setting.
-  Clock setting.

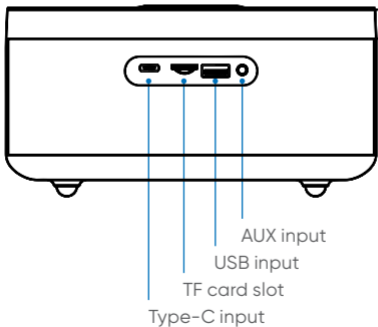

4.1 WIRELESS CHARGER OPERATIONS


1. Connect your alarm clock to a power source using the Type-C cable and the LED indicator will glow red.
2. Place your smartphone or earbuds or smartwatch in the center of the charging area at the top of the alarm clock, and it will start charging.

Note: To ensure fast wireless charging of your device, use a QC 3.0 charger (not included) and the included 2A quick charge cable.

4.2 CONNECTING TO BLUETOOTH





1. Turn on your smartphone's Bluetooth and search for the alarm clock Bluetooth name Atmos on your smartphone.
2. Connect with the model by clicking the name on the smartphone. You will hear a tone that indicates successful connection.
3. Next time, the smartphone will automatically connect.

4.3 TRUE WIRELESS STEREO (TWS) FUNCTION





When the two speakers are in Bluetooth mode at the same time, long press the  button, two products will be connected automatically right after you hear a tone confirmation.

Note: This function requires an additional product which is not included.





4.4 FM RADIO FUNCTION

1. Long press the  button on the alarm clock to switch to FM mode.
2. Insert the Type-C charging cable into the charging port to act as an antenna and leave the other end unconnected.
3. Short press the  button to enter FM channel automatic searching and saving.
4. Short press the  and  buttons to select the next or last saved FM channel.





4.5 CONNECTING A TF CARD OR USB STICK

1. Long press the  button for TF or USB mode.
Alternatively, insert a TF card or USB stick.
Then, TF or USB mode will start automatically.
2.  Short press: Next song.
Long press: Volume up.
3.  Short press: Previous song.
Long press: Volume down.
4.  Short press: Pause or play.





4.6 LISTENING TO NATURE SOUNDS

1. Long press the  button for Nature Sound mode.
The display will show the NS icon light and your choice between 1 to 7 white noise natural sounds.
2.  Short press: Next sound.
Long press: Volume up.
3.  Short press: Previous sound.
Long press: Volume down.
4.  Short press: Pause or play.

4.7 SETTING THE CLOCK

1. Short press the  button to enter the clock and minute setting.
2. Press the  and  buttons to adjust the hour and minutes.
3. Long press the  button to switch between 12H and 24H mode.

4.8 SETTING THE ALARM

1. Long press the  button to turn on/off the alarm.
2. Short press the  button to enter the alarm setting mode, the sequence is hour-minute-alarm and bells – with seven choices.
3. Press the  and  buttons to adjust the hour and minutes, or select the alarm bell.

Note: When the product is in power-on mode and the alarm sounds, a short press of any button will silence the alarm. If no action is taken, it will enter snooze mode and the alarm will sound and stop automatically every few minutes, with intervals gradually decreasing until it sounds and stops at one minute intervals.

When the product is in low-battery mode and the alarm sounds, if no action is taken to silence it, the product will automatically power off after one minute.

5.0 PRODUCT SPECIFICATIONS

Bluetooth version:	5.4 speaker: 5W*2
Working distance:	10 metres
Wireless charging input:	5V/2A, 9V/2A
Wireless charging output for phone:	15W (Max.)
Wireless charging output for earbuds:	3W
Wireless charging output for Apple watch:	2.5W
Battery capacity:	3.7V/1200mAh
Bluetooth frequency:	2.4GHZ-2.48GHZ
Charging for speaker input:	DC 5V/1A
Charging time:	2-3 hours
Playing time:	Approximately 3 hours
Product size:	180x100x90(MM)
Frequency response:	50Hz-20KHz

TROUBLESHOOTING

In the unlikely event of difficulties with your alarm clock please follow the trouble shooting guide below.

Problem	Reason(s)	Solution(s)
No Power.	Power cable not connected to wall socket. Power socket is not switched on.	Make sure the plug is connected. Make sure that there is power at the AC outlet.
No sound.	Volume control set to minimum. Device volume set to minimum.	Increase the volume level. Adjust volume on the Bluetooth-connected device.
Alarm does not sound.	Alarm mode not active. Clock not set. Alarm not set.	Activate the alarm following steps on page 9. Set the clock following steps on page 9.
Clock/alarm setting erased.	Power has been interrupted. Power plug has disconnected.	Make sure the plug is connected. Reset the clock/alarm.
The audio quality is poor after connected to BT.	The Bluetooth reception is poor.	Move the device closer to alarm clock or remove any obstacle between them.
Cannot connect with the device.	The Bluetooth function of the device is not enabled. This product is already connected with another Bluetooth-enabled device.	Refer to the user manual of the device for how to enable the function. Disconnect that device and then try again. Press and hold for two seconds to enter pairing mode, and then try again.

6.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased

or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code
for customer support:**



6.1 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out

of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

6.2 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make

any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries,

robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection

or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

6.3 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.



V1.0

Smart Tech for Growing Explorers.

DIRECTED[®]

All Images, Information and Content are Copyright ©
2026 Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.pixbee.com.au | www.pixbee.co.nz