



PixPlay Gen 2

Kids Digital Camera

With Built-in Games and Music Player – User Manual

PXB-KC120

CONTENTS

1.0	INTRODUCTION	4
2.0	USE AND SAFETY INSTRUCTIONS	4
2.1	GENERAL PRECAUTIONS.....	4
2.2.	BATTERY SAFETY.....	5
2.3	CARE AND MAINTENANCE.....	6
2.4.	PRODUCT DISPOSAL.....	7
3.0	GETTING STARTED.....	7
3.1.	WHAT'S IN THE BOX.....	7
3.2.	PRODUCT LAYOUT AND BUTTONS.....	8
3.3.	INSTALLING MEMORY CARD.....	10
3.4.	CHARGING THE BATTERY	11
4.0	OPERATING INSTRUCTIONS	11
4.1.	POWERING ON/OFF	11
4.2.	NAVIGATING HOME MENU.....	12

4.3.	FORMATTING MEMORY CARD.....	13
4.4.	SYSTEM SETTINGS.....	13
4.4.1	SETTING DATE AND TIME.....	13
4.4.2	SETTING VOLUME.....	14
4.4.3	SETTING FREQUENCY	14
4.4.4	SETTING AUTO POWER OFF.....	15
4.4.5	SETTING SCREEN SAVER	16
4.4.6	SETTING PHOTO RESOLUTION	16
4.4.7	SETTING VIDEO RESOLUTION.....	16
4.4.8	SETTING LOOP RECORDING.....	17
4.4.9	RESETTING DEVICE TO DEFAULT SETTINGS.....	17
4.4.10	VIEWING PRODUCT INFORMATION.....	18
4.5	TAKING PHOTOS.....	18
4.6	TAKING VIDEOS.....	20
4.7	PLAYING MP3 MUSIC	21
4.8.	VIEWING PHOTOS AND VIDEOS ON CAMERA	22

4.9.	PLAYING BUILT-IN GAMES	23
4.10.	TRANSFERRING FILES	24
4.10.1	FILE TRANSFER USING THE SUPPLIED USB CABLE.....	24
4.10.2	FILE TRANSFER USING CARD READER.....	26
5.0	TROUBLESHOOTING.....	27
6.0	SPECIFICATIONS.....	29
7.0	WARRANTY TERMS AND CONDITIONS.....	30
7.1	INDEMNITY	31
7.2	WARRANTY AND WARRANTY DISCLAIMER.....	32
7.3	LIMITATIONS OF LIABILITY.....	34
8.0	NOTES.....	36

1.0 INTRODUCTION

Welcome to the Pixbee family!

The PixPlay PXB-KC120 Gen2 Kids Digital Camera has been carefully designed for use with kids 5 years and above. This user manual will provide the necessary information to enable you to operate the camera with ease.

We encourage you to retain this user manual for future reference.

2.0 USE AND SAFETY INSTRUCTIONS

2.1 GENERAL PRECAUTIONS

1. This device is not for use by children under the age of five (5). Small parts are choking hazards. Always follow basic safety precautions and common sense when using this device, especially when children are present.

WARNING: Choking hazard. Small parts. Not for children under 5 years.

2. This device is intended for household use only and not for commercial use.
3. Only use this device in a dry location.
4. Do not store the device near a heat source or in dirty, humid, or wet places.

5. Do not place the device in places with high temperatures (over 40°C), especially not in a car with the windows closed during summer. Keep the device out of direct sunlight.
6. Do not attempt to disassemble this device. There are no user serviceable parts inside this device.
7. Press the button gently. Pressing the buttons or the screens too hard may damage the device.
8. Disconnect the USB charging cable from camera, power source and computer when the device is left unused for a long period of time.
9. Do not disconnect the device from a computer while file transfer is still in progress.

2.2. BATTERY SAFETY

This device has a built-in lithium polymer battery. When handled incorrectly, lithium polymer can be dangerous and potentially harmful and do damage to persons or property.

1. Always unwind the USB cable before charging.
2. Do not charge the battery in temperatures higher than 40°C or lower than 0°C.

3. Do not overcharge the camera battery. Once the battery is fully charged, remove the charging cable from the camera as soon as possible. Do not leave the battery charging unattended overnight.
4. Always charge the camera battery in a safe environment away from flammable materials.
5. Do not leave the battery charging unattended and beware of the charging condition. Battery charging is to be conducted under adult supervision.
6. Do not use the camera if the device or battery is damaged in any way, leaking, making noises and/or punctured.

2.3 CARE AND MAINTENANCE

1. Do not drop the device on a hard surface.
2. Do not expose the device to moisture and liquids.
3. Keep the device clean by wiping it with a dry soft cloth. Disconnect the device from the power source before cleaning.
4. Keep the camera lens clean for clear images by using a clean, dry, non-alcohol cotton swab.
5. Do not use alcohol, thinners, or benzene to clean the device surface.

2.4. PRODUCT DISPOSAL

 
1. This device has a built-in lithium battery. Please observe local regulations regarding the disposal of old devices with batteries.
2. Do not dispose of the device in fire.

3.0 GETTING STARTED

3.1. WHAT'S IN THE BOX

- 1 x PixPlay PXB-KC120 Gen2 Kids Digital Camera with a pre-installed 32GB Micro-SD card
- 1 x USB charging cable
- 1 x Lanyard
- 1 x Fun sticker sheet
- 1 x User manual

3.2. PRODUCT LAYOUT AND BUTTONS

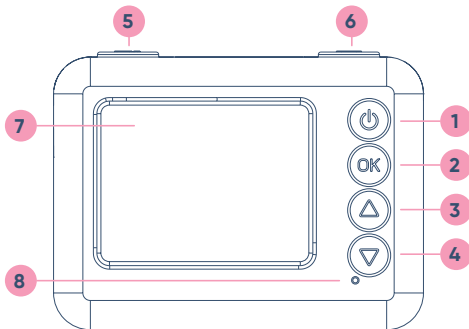

1. Power / Menu Button

2. OK Button

3. Up Button

 
4. Down Button

5. Video Button

6. Camera Button

7. Screen

8. Light Indicator

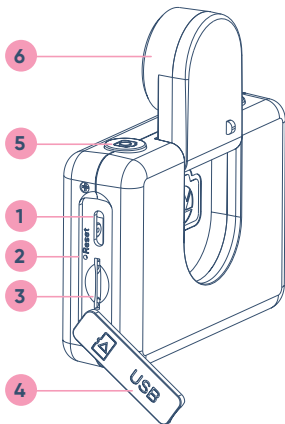


1. USB Port
2. Reset Pinhole
3. Micro-SD Card Slot
4. Protective Cover
5. Camera Button
6. Lens

3.3. INSTALLING MEMORY CARD

This camera is compatible with Micro-SD cards that have up to 64GB storage capacity. When a compatible memory card is present in the card slot, the camera will automatically save photos taken and video recorded in the memory card. This camera comes with a 32GB micro-SD card pre-installed in the card slot.

NOTE: Photos and videos stored in the Micro-SD card can be copied out and transferred to a computer.

 - Turn off the camera.
- Open the I/O Protective Cover.
- Locate the Micro-SD card slot and properly insert the memory card with the contact pins facing the camera screen as shown below until it locks in place (indicated by a 'click' sound).

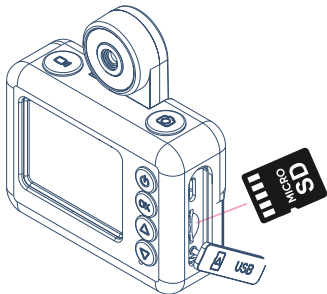

3.4. CHARGING THE BATTERY

Fully charge the battery before first use.

It takes approximately two hours to fully charge the camera's built-in battery. When the screen shows a low battery icon, recharge the battery as soon as possible.

- Connect one end of the USB cable to the camera USB port and the other end to a 5V, 1A max DC source, such as the USB port on a computer.
- When the camera is turned on, the light indicator shows a mixture of red and blue when charging is in progress, and solid blue when charging is completed.
- When the camera is powered off, the light indicator shows a solid red when charging is in progress and turns off when charging is completed.

4.0 OPERATING INSTRUCTIONS

4.1. POWERING ON/OFF

- To turn on/off the camera, press and hold the Power Button.

The camera will automatically turn off after the preset Auto Off time.

4.2. NAVIGATING HOME MENU

When you power on the camera, it goes to the home menu. You can also press the Menu (Power) Button to return to the home menu from sub-menus.

HOME MENU



Games



Gallery



Camera



Video



Settings



**MP3
Player**

- To navigate the screen options, use the Up/Down Button.
- To enter the selected mode, press the OK Button.

4.3. FORMATTING MEMORY CARD

Please format a new memory card before using it on this camera. All data on the memory card will be lost after formatting. If necessary, please back up all data before formatting.

- Ensure the memory card Inserted in the camera.
- Turn on the camera.
- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Format' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select 'YES' and press the OK Button to confirm selection.

4.4. SYSTEM SETTINGS

You can view camera information and edit camera settings in the 'Settings' menu. The 'Settings' menu options include Format, Date/Time, Volume, Video Resolution, Photo Resolution, Frequency, Auto Power Off, Screen Saver, Loop Recording, Reset Device and About Device.

4.4.1 SETTING DATE AND TIME

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.

- Use the Up/Down Button to select the 'Date/Time' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to adjust settings and the Camera Button to switch to the next field.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.2 SETTING VOLUME

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Volume' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to adjust settings.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.3 SETTING FREQUENCY

The frequency setting refers to the electrical power frequency of the lighting environment and is used to reduce flickering in videos or photos taken under artificial lighting.

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Frequency' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.4 SETTING AUTO POWER OFF

The auto power off setting controls how long the camera remains powered on when inactive before it automatically shuts down to conserve battery life.

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Auto Power Off' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.5 SETTING SCREEN SAVER

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Screen Saver' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.6 SETTING PHOTO RESOLUTION

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the "Photo Resolution" icon and press the OK Button to confirm selection.
- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.7 SETTING VIDEO RESOLUTION

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Video Resolution' icon and press the OK Button to confirm selection.

- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.8 SETTING LOOP RECORDING

The loop recording feature is a video recording mode that continuously records video in short, fixed-length segments.

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Loop Recording' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to choose your setting.
- Press the OK Button to exit the setting page, returning to the 'Settings' menu.

4.4.9 RESETTING DEVICE TO DEFAULT SETTINGS

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'Reset Device' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select 'YES'.
- Press the OK Button to confirm the reset action.

4.4.10 VIEWING PRODUCT INFORMATION

- From the home menu, use the Up/Down Button to select the 'Settings' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to select the 'About Device' icon and press the OK Button to confirm selection.
- Press the Menu (Power) Button to exit the details screen, returning to the 'Settings' menu.

4.5 TAKING PHOTOS



To take photos, enter the 'Camera' mode. Special shooting modes available in the 'Camera' mode include normal shooting, continuous shooting, delayed timer shooting, delayed and continuous shooting, colour filters, special effects and photo frames.

Follow the steps below to take photos:

- Turn on the camera.
- Press the Camera Button to enter the 'Camera' mode.
- Use the Up/Down Button to browse through various shooting mode options: normal, colour filters, special effects and photo frames.

- Use the OK Button to browse through shooting mode options: normal, continuous shooting, delayed timer shooting and delayed continuous shooting.
- Once you have chosen your shooting mode, press the Camera Button once to initiate photo taking.
- To exit the 'Camera' mode and return to the home menu, press the Menu (Power) Button.

When a compatible Micro-SD card is installed in the camera:

- All still images are stored in the memory card's subfolder named 'PHOTO'.
- Only photos stored in a Micro-SD card can be copied out and transferred to a computer.

When a Micro-SD card is not present in the camera:

- The camera's small built-in memory allows you to take a photo, but this still image cannot be copied out and transferred to a computer.

4.6 TAKING VIDEOS



To take videos, enter the 'Video' mode.

For video recording, a compatible Micro-SD card (maximum 64GB) must be inserted in the card slot.

Special shooting modes available in the 'Video' mode include normal shooting and colour filters.

Follow the steps below to take videos:

- Turn on the camera.
- Press the Video Button to enter the 'Video' mode.
- Use the Up/Down Button to browse through shooting mode options. To enable loop recording for video mode, make the setting change for 'Loop Recording' found in the 'Settings' menu.
- Once you have chosen your shooting mode, press the Video Button to start/stop recording.
- To exit the 'Video' mode and return to the home menu, press the Menu (Power) Button.

When a compatible Micro-SD card is installed in the camera:

- Videos taken are stored in the memory card's subfolder named 'VIDEO' in AVI format.

If a memory card is not inserted into the camera, you cannot take videos.

4.7 PLAYING MP3 MUSIC



You can play your music files saved in the memory card's subfolders named 'MP3'.

Follow the steps below to play MP3 tracks:

- Save your MP3 tracks on the micro-SD card in the subfolder named 'MP3'.
- Turn on the camera.
- From the home menu, use the Up/Down Button to select the 'MP3 Player' icon and press the OK Button to confirm selection.
- To view/hide the Music List, press the Camera Button.
- Use the Up/Down Button to navigate the Music List and select a track.
- Press the OK Button to play/pause music play.
- To exit the 'Music' mode and return to the home menu, press the Menu (Power) Button.

NOTE: You can save music files into memory card by connecting the camera to your computer using the included USB cable.

4.8. VIEWING PHOTOS AND VIDEOS ON CAMERA



The 'Gallery' feature allows you to view and delete photos, as well as replay and delete videos on the camera. When a Micro-SD card is present in the card slot, the 'Gallery' browses through the card contents. When a memory card is not present, the 'Gallery' shows the photo inside the camera's built-in storage.

Follow the steps below to view and delete files on camera:

- Turn on the camera.
- From the home menu, use the Up/Down Button to select the 'Gallery' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to browse through photos and videos.
- To delete a file, press and hold the OK button until a 'delete' prompt appears on screen. Use the Up/Down Button to select 'Yes' or 'No' then press the OK button to confirm your selection. To exit the prompt anytime, press the Power button.
- To play/pause a video, press the OK button.
- To exit the 'Gallery' mode and return to the home menu, press the Menu (Power) button again.

4.9. PLAYING BUILT-IN GAMES



The camera has built-in games. Follow the instructions to browse through games, plus start and end games.

Follow the steps below for start and end games.

- Turn on the camera.
- From the home menu, use the Up/Down Button to select the 'Games' icon and press the OK Button to confirm selection.
- Use the Up/Down Button to navigate games. Note basic game play instructions listed for each game on the screen.
- To start a selected game, press the OK button. Depending on the chosen game, you may use a combination of Up/Down button, Video Button and Camera button for game control.
- To end the game, press the Power button.
- To exit the 'Games' mode and return to the home menu, press the Menu (Power) button again.

4.10. TRANSFERRING FILES

There are two ways you can transfer files from the camera's memory card to a computer:

- By connecting the camera to a computer using the included USB cable.
- By inserting the memory card into a card reader.

4.10.1 FILE TRANSFER USING THE SUPPLIED USB CABLE

Follow the steps below to transfer files using the supplied USB cable.

- Power off the camera.
- Open the I/O Protective Cover and check that there is a Micro-SD card in the slot.

NOTE: The camera is compatible with Micro-SD cards that have up to 64GB storage capacity, and formatted in the FAT32 file system. Read more in the 'FORMATTING MEMORY CARD' section.

- Turn on the camera.
- Connect the camera to the computer using the USB cable supplied.
- The camera screen will display this graphic indicating camera is now in data transfer mode.



- Open [My Computer] or [Windows Explorer] on your computer. A 'USB Drive' appears in the computer's drive list. Click the 'USB Drive' icon to view its contents, and to copy and transfer files between your computer and the memory card inserted in the camera.

FOLDER	DESCRIPTION
MP3	Where you save music files in MP3 format. Stored files can be viewed in the camera's 'MP3 Player' function.
PHOTO	Where normal photos and pictures taken with colour filters and special effects are saved. Stored files can be viewed in the camera's 'Gallery' mode.
VIDEO	Where videos taken are saved. Stored files can be viewed in the camera's 'Gallery' mode.

- To end file transfer, select and eject the 'USB Drive' from your computer. Once the 'USB Drive' icon disappears, you can unplug the USB cable.

4.10.2 FILE TRANSFER USING CARD READER

- Power off the camera.
- Open the Protective Cover.
- Eject the memory card from the camera and then insert it into a computer's built-in micro-SD card reader slot or an external card reader that is connected to a computer.
- Open [My Computer] or [Windows Explorer] on your computer. Click the removable disk icon that represents the memory card.
- Copy images from the card into a directory of your choice on the computer's hard disk.
- To end file transfer, select and eject the removable disk from your computer. Once the icon disappears, you can remove the memory card.

5.0 TROUBLESHOOTING

PROBLEM	SOLUTION
Frozen camera screen	Open the camera's Protective Cover. Locate the reset pinhole and gently press it using a small paper clip with a blunt tip to force reset the camera.
Cannot connect to computer.	Check all cable connections to ensure that they are secure.
Cannot detect memory card.	1. Check that the Micro-SD card is correctly inserted and close the protective cover properly. 2. Check that the memory card size is supported. The camera is compatible with Micro-SD cards that have up to 64GB storage capacity 3. Check to see if the file system of your memory card is FAT32. The camera does not support other file systems. If required, back up your data from memory card and format it in the FAT32 file system before using the camera.

PROBLEM	SOLUTION
Frozen screen when a Micro SD card is inserted.	Use a new or formatted Micro-SD card for your camera.
No response when the Camera button is pressed.	Wait for data processing to be completed before taking the next image. Delete some images in the Micro-SD card, if the memory is full.
The images captured are not clear.	1. Hold your camera steadily when taking photos. 2. Take photos under good lighting condition. 3. Clean the camera lens surface.
The camera automatically turns off.	Charge the battery using the supplied USB cable.
Images are not displayed on the camera screen.	This camera cannot display non-JPG images or a memory card with non-JPG images loaded or recorded with another camera.

6.0 SPECIFICATIONS

Camera model	PXB-KC120 series
Display	2.0-inch IPS LCD
Still image size	10M / 8M / 5M / 2M
Video resolution	1080P / 720P
Built-in memory	4MB
External memory	Compatible with Micro-SD card with a storage capacity up to 64GB
File Format	JPG format (image) / AVI format (video) / MP3 format (music)
Connectivity	USB charging and data cable included
Power Source	Built-in rechargeable 600mAh Li-ion battery
Charging Time	Approximate two hours

7.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code
for customer support:**



7.1 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

7.2 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event

of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty, including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

7.3 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.

8.0 NOTES



Keep Safe, Stay Connected with Pixbee™

DIRECTED.

All Images, Information and Content are Copyright © 2025 Directed Electronics Australia Pty Ltd. All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.pixbee.com.au | www.pixbee.co.nz